

# DIAL OUT:

> Lift handset, (or press SPEAKER key) dial 9

## INTERCOM CALLS

- Lift handset, (or press SPEAKER)
- Dial extension number

## TRANSFER A CALL

- > With active call press **TRANSFER** Key
- Dial extension (OR a pre-programmed key)
- Announce call (optional),
- hang up for transfer to go through

# PARK A CALL:

- With active call press PARK SET key;
  - (system will assign call to a park zone, which will show on your display ex: 01)
- Intercom or Page employee and announce the parked call

To Retrieve Call: Press PARK RETRV key and dial code where call was parked ex: 01

# LAST NUMBER REDIAL

- > Press **REDIAL** key repeatedly to review last 5 numbers dialed:
- Press # for system to dial number on display

# **CONFERENCE CALLS**

- With active call, press TRANSFER key
- > Dial 9 for another line, make 2<sup>nd</sup> call (or dial an extension number)
- Press ConF key

# CALL FORWARD (IF APPLICABLE)

- Press SPEAKER key
- Press CALL FwD key
- Enter (if all calls to go straight to your mailbox) OR enter another person's ext OR enter 9 plus a telephone number for calls to go off premise: NOTE: this takes 2 outside lines when in effect
- > Press **SPEAKER**

<u>To Cancel</u>: press speaker then CALL FwD Key then \*, press speaker

# Do Not Disturb (IF Applicable)

- Press SPEAKER
- Press DND key
- Press SPEAKER

## **ONE-TOUCH KEY PROGRAMMING**

- > Press **Conf** key
- Press key to be programmed
- > Enter an ext number (OR 9 then a telephone number)
- Press ConF key

<u>Note</u>: when a one touch key is programmed it takes one of the station bin numbers from the 00-19 allowed in station speed dial

## STATION SPEED DIAL PROGRAMMING

- > Press STA soft key
- > Press **UP** soft key to choose a bin 00-19
- > Press ENTRY soft key, then NUMBER soft key
- > Enter 9 plus the desired number, then press SET
- To add a name: follow step 1&2, then press ENTRY, then NAME: spell out name (#after each letter), press SET

## **USING STATION SPEED DIAL**

- Press REDIAL then a code (00-19)
- OR press STA, use UP and DWN to scroll, lift handset when desired speed dial is displayed

### **RING TONE**

- > Press FEATURE key then 3
- Press 3 repeatedly to hear/set different ring tones

### **RING VOLUME**

- Press FEATURE key then 0
- Use arrow keys to adjust volume
- Press FEATURE key when done

### **MICROPHONE MUTE:**

> Press MIC key on/off

